




**OWNER'S MANUAL
PARTS LIST**

2001-NSR500V

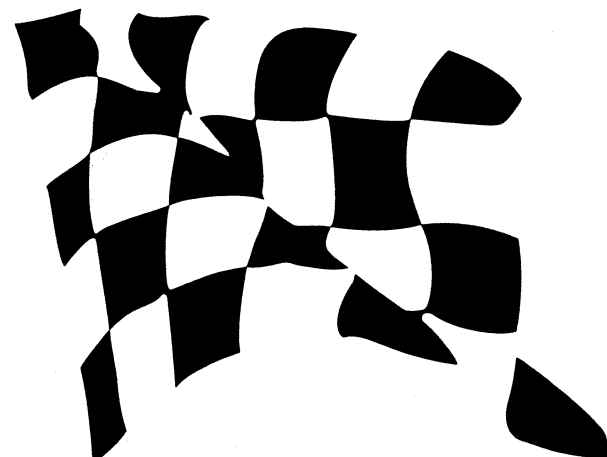

Important

This machine is designed and manufactured for competition use only and is sold "as-is with no warranty". It does not conform to federal motor vehicle safety standards and operation on public streets, roads, or highways is illegal.

State laws prohibit operation of this vehicle except in an organized racing or competitive event upon a closed course which is conducted under the auspices of a recognized sanctioning body or permit issued by the local governmental authority having jurisdiction.

First determine that operation is legal.

Operator only, no passengers.

Read this manual carefully.

This manual should be considered as a permanent part of the motorcycle and should remain with the motorcycle when resold.

Safety messages

Your safety and the safety of others is very important. We have provided important safety messages in this manual and on the NSR500V. Please read these messages carefully.

A safety message alerts you to potential hazards that could hurt you or others. Each safety message is preceded by a safety alert symbol  and one of three words, **DANGER**, **WARNING**, or **CAUTION**.

These mean :



You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.



You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.



You CAN be HURT if you don't follow instructions.

Each message tells you what the hazard is, what can happen, and what you can do to avoid or reduce injury.

Damage prevention messages

You will also see other important messages that are preceded by the word **NOTICE**.

This word means:

NOTICE

Your NSR500V or other property can be damaged if you don't follow instructions.

The purpose of these messages is to help prevent damage to your NSR500V other property, or the environment.

- **This owner's manual / parts list only includes the items changed from the 2000 model.**
- **Refer to the 2000 model owner's manual / parts list on the other unchanged items.**

Transmission Gear Ratio Table

Optional transmission gears are available for use in the transmission. Care should be taken when substituting optional gears for the standard gears. The optional low gear/mainshaft has marking etched on the shaft end for identification. Identification for other gears is aided by a marking located on the side of the gear.

Gears	Marking And Parts Number				No. of Teeth		Ratio		ETC	
	Main		Counter		Main	Counter				
1st	1 Stamp	23211-NX6-910	C1-P1	23411-NX6-910	15	33	2.200	OP		
	2 Stamps	23212-NX6-910	C1-P2	23412-NX6-910	15	32	3.133	OP		
	↑	↑	C1-P3	23413-NX6-910	15	31	2.067	OP		
	3 Stamps	23213-NX6-910	C1-P4	23414-NX6-910	16	32	2.000	STD		
	↑	↑	C1-P5	23415-NX6-910	16	31	1.938	OP		
2nd	M2-P1	23421-NX6-910	C2-P1	23431-NX6-910	17	31	1.824	OP		
	M2-P2	23422-NX6-910	C2-P2	23432-NX6-910	17	30	1.765	OP		
	↑	↑	C2-P3	23433-NX6-910	17	29	1.706	OP		
	M2-P4	23424-NX6-910	C2-P2	23432-NX6-910	18	30	1.667	OP		
	M2-P5	23425-NX6-910	C2-P4	23434-NX6-910	18	29	1.611	OP		
	↑	↑	C2-P5	23435-NX6-910	18	28	1.556	STD		
3rd			C3-P1	23451-NX6-910	18	29	1.611	OP		
			C3-P2	23452-NX6-910	18	28	1.556	OP		
			C3-P3	23453-NX6-910	19	29	1.526	OP		
			C3-P2	23452-NX6-910	19	28	1.474	OP		
			C3-P5/C4-P1	23455-NX6-910	20	28	1.400	OP	C3-P5=C4P1	
			C3-P6/C4-P2	23456-NX6-910	20	27	1.350	STD	C3-P6=C4P2	
	4th	M3-4-P1 23441-NX6-910	M3-4-P4 23444-NX6-910	(C4-P1) =C3-P5/C4-P1		23455-NX6-910	20	28	1.400	OP
M3-4-P2 23442-NX6-910		M3-4-P5 23445-NX6-910	(C4-P2) =C3-P6/C4-P2		23456-NX6-910	20	27	1.350	OP	
M3-4-P3 23443-NX6-910		M3-4-P6 23446-NX6-910	M3-4-P7 23447-NX6-910	C4-P3	23473-NX6-910	20	26	1.300	OP	
				C4-P4	23474-NX6-910	24	30	1.250	OP	
				C4-P5	23475-NX6-910	24	29	1.208	STD	
5th		M5-P1	23481-NX6-910	C5-P1	23491-NX6-910	21	26	1.238	OP	
		M5-P2/M6-P1	23482-NX6-910	C5-P2	23492-NX6-910	22	26	1.182	OP	M5-P2=M6-P1
	↑	↑	C5-P3/C6-P1	23493-NX6-910	22	25	1.136	OP		
	M5-P4/M6-P2	23484-NX6-910	↑	↑	23	25	1.087	STD	M5-P4=M6-P2	
	M5-P5/M6-P3	23485-NX6-910	C5-P4/C6-P2	23494-NX6-910	23	24	1.043	OP	M5-P5=M6-P3	
6th	(M6-P1) =M5-P2/M6-P1	23482-NX6-910	(C6-P1) =C5-P3/C6-P1	23493-NX6-910	22	25	1.136	OP	C5-P3=C6-P1	
	(M6-P2) =M5-P4/M6-P2	23484-NX6-910	↑	↑	23	25	1.087	OP		
	(M6-P3) =M5-P5/M6-P3	23485-NX6-910	(C6-P2) =C5-P4/C6-P2	23494-NX6-910	23	24	1.043	OP	C5-P4=C6-P2	
	M6-P4	23504-NX6-910	↑	↑	24	24	1.000	OP		
	↑	↑	C6-P5	23515-NX6-910	24	23	0.958	STD		

2001-NSR500V PARTS LIST

CONTENTS

INSTRUCTIONS FOR USE OF PARTS LIST 4

ENGINE GROUP

E- 1	Cylinder / Cylinder head	※
E- 2	R. Crankcase cover / Clutch	5
E- 3	Exhaust valve pulley / Rear adjuster rod	※
E- 4	A. C. generator	※
E- 5	Water pump	※
E- 6	Crankcase	6,7
E- 7	Crankshaft	※
E- 8	Transmission	8,9
E- 9	Gearshift fork / Gearshift drum	10
E-10	Carburetor	※

FRAME GROUP

F- 1	Servo motor / Meter / Meter panel	※
F- 2	Cable / Switch / Handlebar	※
F- 3	Front brake caliper / Front brake master cylinder	※
F- 4	Steering stem / Steering damper / Front fender	※
F- 5	Front wheel	※
F- 6	Rear brake caliper / Rear brake master cylinder	※
F- 7	Rear wheel	※
F- 8	Fuel tank	※
F- 9	Carburetor box	※
F-10	Expansion chamber	※
F-11	Gearshift pedal / Footpeg	※
F-12	Swingarm	※
F-13	Shock absorber (Front fork) (Rear cushion)	※
F-14	Ignition coil / Wire harness	※
F-15	Frame body	※
F-16	Radiator	※
F-17	Cowl	※

INDEX 11

※ Refer to the 2000 model

INSTRUCTIONS FOR USE OF PARTS LIST

This parts list is to be used when ordering replacement parts; it contains all parts for model 2000 · 2001-NSR500V.

NOTICE

The parts for the 2001 model should be purchased from HRC-JAPAN through the subsidiary, for HONDA-EUROPE does not sell the parts.

I . How to order parts

●Information required


Replacement parts orders must contain both the part number and the stamped number(s) as described below. This is because any changes and modifications of parts are registered at HONDA with the pertinent parts and stamped numbers.

- If quantities are shown in (), the parts are optional.
- If “N” is indicated in the quantity column, the parts quantity is to be determined as required.


II . How to read this parts list

●Make-up of the part number

(Example) General parts

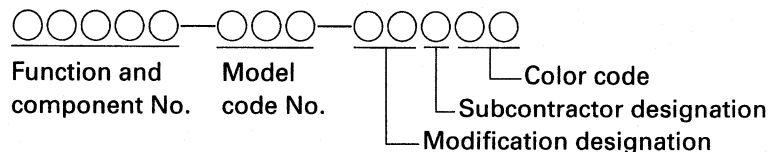

(Example) Bolts, nuts and other standard parts



●Abbreviations

The following abbreviations are used in this parts list.

A.C.	Alternating current	M.	Middle
ASSY.	Assembly	mm	Millimeter
C.	Center	R.	Right
COMP.	Complete	STD.	Standard
G	Gram	T(22T)	Tooth (22 Teeth)
L.	Left	T.W.	Thermo Water
L(100L)	Link (100Links)		

●Serial number

Frame No. NSR500VF-01001~(2000), NSR500VF-11001~(2001)

Engine No. NSR500VE-01001~(2000), NSR500VE-11001~(2001)

IMPORTANT INFORMATION

- The parts which have a dot “•” on the left side of the “Ref. No.” are exclusive for HRC products. To purchase these parts, consult your Honda dealer.
- The parts which have no dot are Honda products and can be purchased from your nearest Honda motorcycle dealer.


MEMO

Block No.

E-2

R.Crankcase cover
Clutch

2001 NSR500V
2000 NSR500V

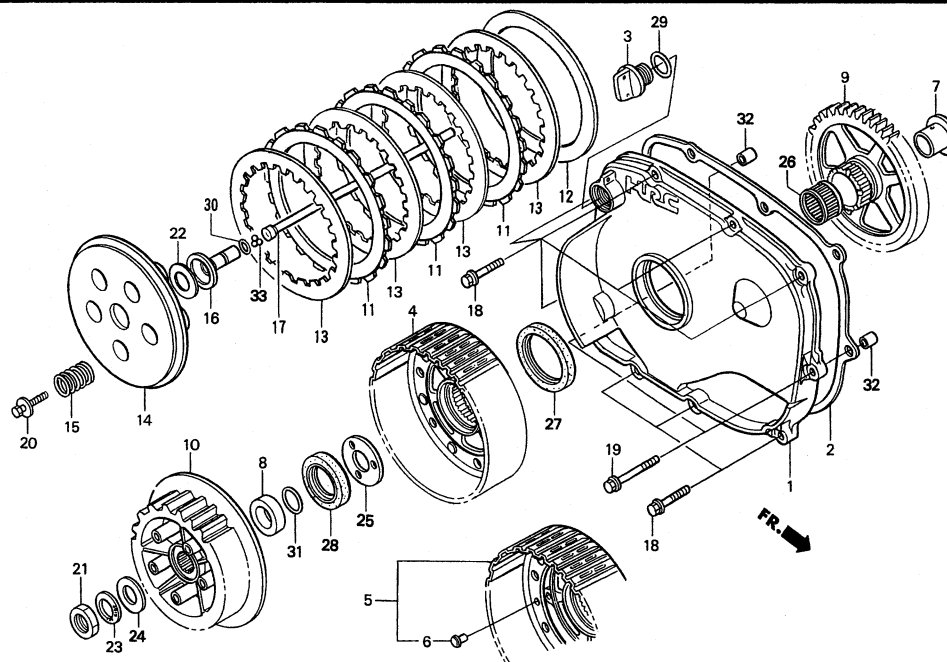

Ref. No.	Part No.	Description	Reqd. No. '00	'01	Remarks	Ref. No.	Part No.	Description	Reqd. No. '00	'01	Remarks
• 1	11331-NX6-000	COVER, R.crankcase	1	—		• 17	22850-NX6-000	ROD COMP.clutch lifter	1	1	
•	11331-NX6-910	COVER, R.crankcase	—	1		• 18	90004-GHB-650	BOLT, flange NSHF 6×20	8	8	
• 2	11395-NX6-000	GASKET, R.cover	1	—		19	90004-GHB-680	BOLT, flange NSHF 6×28	2	2	
•	11395-NX6-910	GASKET, R.cover	—	1		20	90022-MM5-000	BOLT WASHER, 6×25	5	5	
• 3	15611-NF4-900	CAP, oil filler	1	1		• 21	90208-NX6-000	NUT, lock 22mm	1	1	
• 4	22100-NX6-000	OUTER COMP.clutch	1	1		• 22	90411-NX6-000	SHIM, clutch adjusterT0.8	(1)	(1)	
• 5	22100-NX6-305	OUTER SET, clutch	1	1		•	90412-NX6-000	SHIM, clutch adjusterT1.2	(1)	(1)	
						•	90413-NX6-000	SHIM, clutch adjusterT1.6	1	1	
• 6	22103-HA0-300	RIVET, 7mm	6	6		•	90414-NX6-000	SHIM, clutch adjusterT2.0	(1)	(1)	
• 7	22106-NX6-000	COLLAR, primary driven gear	1	1		•	90415-NX6-000	SHIM, clutch adjusterT2.4	(1)	(1)	
• 8	22108-NX6-700	COLLAR, 27.2×34×7.5	1	1		23	90432-MB0-010	WASHER, spring 22mm	1	1	
• 9	22111-NX6-000	GEAR, primary driven P-1(52T)	(1)	(1)		24	90451-KG4-000	WASHER, thrust 22×39×2	1	1	
•	22112-NX6-000	GEAR, primary driven P-2(53T)	1	1		• 25	90497-NX6-000	WASHER, 25mm	1	1	
•	22113-NX6-000	GEAR, primary driven P-3(54T)	(1)	(1)							
• 10	22120-NX6-000	CENTER, clutch	1	1		26	91021-415-005	BEARING, needle 32mm	1	1	
						• 27	91222-NX6-003	OIL SEAL, 54×66×7	1	1	
• 11	22201-NX6-000	DISK, clutch friction	7	7		28	91253-KM1-003	OIL SEAL, 34×52×5	1	1	
• 12	22210-NX6-000	SPACER, clutch	1	1		29	91304-MJ0-003	O-RING	1	1	
• 13	22321-NX6-000	PLATE, clutch	8	8		• 30	91312-NC8-000	O-RING, 10.6×1.3	1	1	
• 14	22351-NX6-000	PLATE, clutch pressure	1	1							
• 15	22401-NX6-000	SPRING, clutch	5	5		• 31	91361-NX6-700	O-RING, 24.5×1.4	1	1	
						32	94301-08100	DOWEL PIN, 8×10	2	2	
• 16	22841-NX6-000	PIECE, clutch lifter	1	1		33	96211-07000	BALL STEEL, 7	3	3	


Block No.

E-6

Crankcase

2001 NSR500V

2000 NSR500V

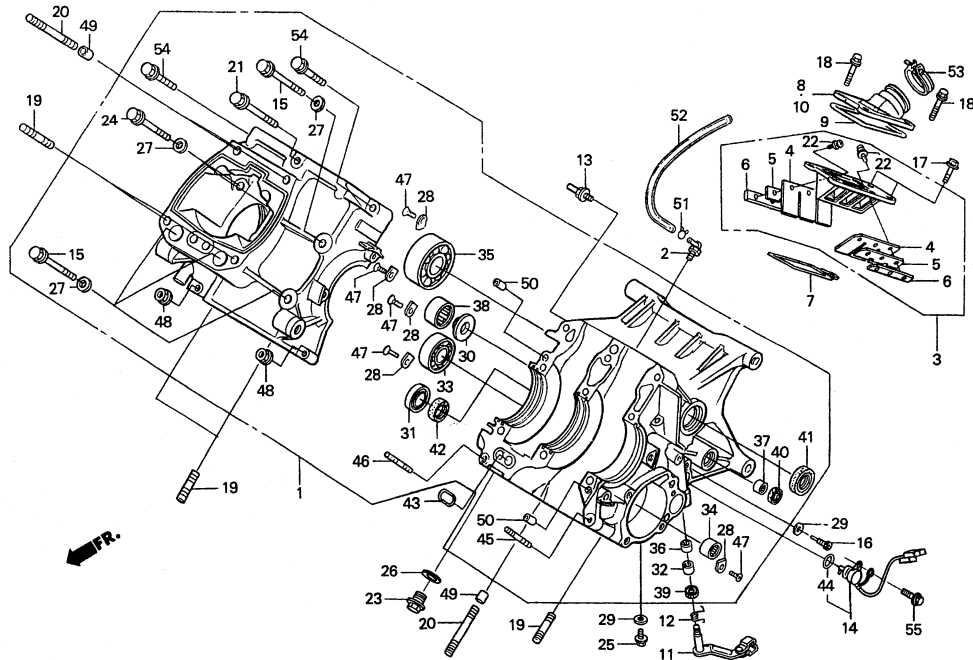

Ref. No.	Part No.	Description	Reqd. No. '00 '01	Remarks	Ref. No.	Part No.	Description	Reqd. No. '00 '01	Remarks
• 1	11000-NX6-307	CRANKCASE SET.	1	—	• 20	90009-NX6-000	BOLT, stud (2) 10×55	3	3
• 2	11000-NX6-308	CRANKCASE SET.	—	1	21	90014-KV3-680	BOLT, flange 8×105	1	1
2	11106-GM2-300	JOINT, breather	1	1	• 22	90021-NX6-000	SCREW-WASHER, 3×7	12	12
• 3	14100-NX6-801	REED VALVE ASSY.	2	2	• 23	90080-NX6-000	BOLT COMP., drain 10×13	1	1
• 4	14112-NX6-600	REED VALVE, only 0.42	4	4	• 24	90082-NX5-000	BOLT, flange 9×87	2	2
• 5	14113-NX6-800	SUPPORTER, reed valve	4	4	• 25	90134-NX5-000	BOLT, drain 6×10	1	1
• 6	14121-NX6-000	STOPPER, front reed valve	4	4	26	90443-MB0-000	WASHER, sealing 10mm	1	1
• 7	14131-NX6-000	GASKET, reed valve	2	2	27	90445-MM4-000	WASHER, 9mm	6	6
• 8	16210-NX6-000	INSULATOR, front carburetor	1	1	• 28	90471-NX6-000	STOPPER, bearing 10	5	5
• 9	16219-NX6-000	GASKET, carburetor insulator	2	2	29	90543-273-000	PACKING, front fork drain	2	2
• 10	16220-NX6-000	INSULATOR, rear carburetor	1	1	30	90558-MJ0-000	PLATE, orifice	1	1
• 11	22810-NX6-000	LEVER COMP., clutch	1	1	31	91001-GBT-003	BEARING, ball 6802	1	1
• 12	22815-NX6-000	SPRING, clutch lever	1	1	32	91002-HA2-008	NEEDLE, shell 10×17×10	1	1
• 13	24615-NX6-000	PIN, shift stopper	1	1	• 33	91004-NX6-801	BEARING, ball radial 6004 special	1	1
• 14	35750-NX6-700	SWITCH ASSY., change	1	1	• 34	91008-NX6-003	BEARING, needle 24×36×14	1	1
• 15	90001-NX6-000	BOLT, flange 9×105	4	4	• 35	91012-NX6-003	BEARING, ball 62/28	1	1
• 16	90002-NX6-000	BOLT, special 6mm	1	1	36	91021-148-006	BEARING, needle 1010	1	1
17	90004-GHB-630	BOLT, flange NSHF 6×16	4	4	• 37	91023-NX6-003	BEARING, needle 15×21×10	1	1
• 18	90004-GHB-650	BOLT, flange NSHF 6×20	8	8	• 38	91024-NX6-003	BEARING, needle 20×34×18	1	1
• 19	90008-NX6-000	BOLT, stud (2) 10×45	5	5					


Block No.

E-6

Crankcase

2001 NSR500V

2000 NSR500V

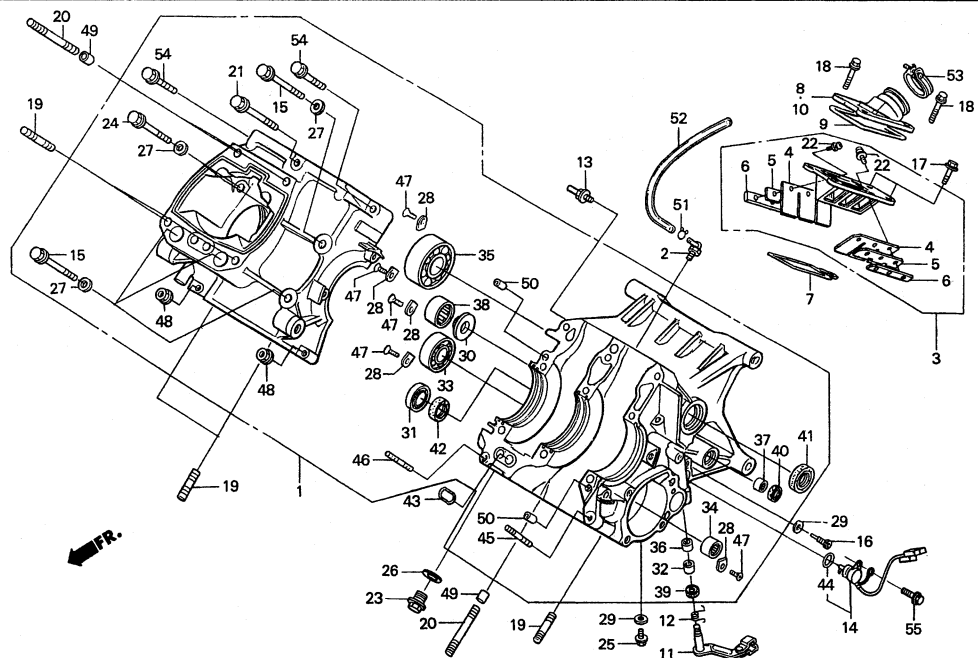

Ref. No.	Part No.	Description	Reqd. No.		Remarks	Ref. No.	Part No.	Description	Reqd. No.		Remarks
			'00	'01					'00	'01	
39	91201-VA4-801	OIL-SEAL, 10×20×5	1	1							
40	91204-GK8-003	OIL-SEAL, 15×24×5	1	1							
• 41	91204-NX6-000	OIL-SEAL, 36×46×6	1	1							
42	91210-723-751	OIL-SEAL, 12×21×5	1	1							
• 43	91303-NX6-000	O-RING, 26×1.6	1	1							
44	91305-KK4-003	O-RING, 16.5×2.5	1	1							
45	92900-06028-0E	BOLT, stud (2) 6×28	1	1							
46	92900-06035-0E	BOLT, stud (2) 6×35	1	1							
47	93600-06012-0A	SCREW, flat 6×12	5	5							
48	94050-06000	NUT, flange 6mm	2	2							
49	94301-12160	DOWEL PIN, 12×16	4	4							
50	94303-08140	DOWEL PIN, 8×14	2	2							
51	95002-02070	CLIP, B7 tube	1	1							
52	95003-10030-31	VINYL-TUBE, 5×8×300	1	1	No sale by HRC Ø5×300mm						
53	90652-GHB-690	BAND, 52 air/c connecting tube	2	2							
54	95701-08055-00	BOLT, flange 8×55	2	2							
55	96001-06012-00	BOLT, flange SH 6×12	1	1							


Block No.

E-8

Transmission

2001 NSR500V

2000 NSR500V

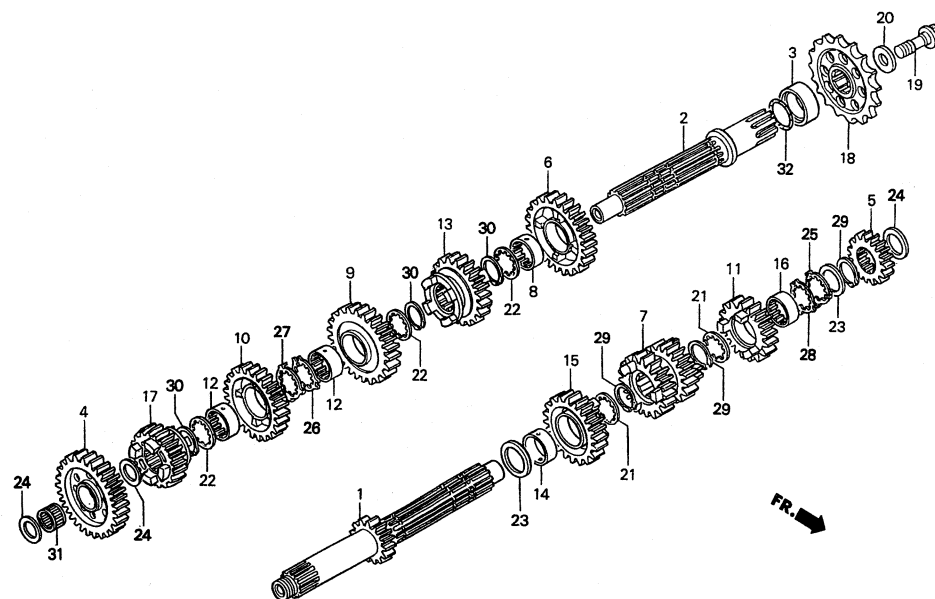

Ref. No.	Part No.	Description	Reqd. No. '00 '01	Remarks	Ref. No.	Part No.	Description	Reqd. No. '00 '01	Remarks
• 1	23211-NX6-910	SHAFT, main plan 1	— (1)	15T, MARK 6G	•	23444-NX6-910	GEAR, M-3rd · 4th plan 4	— (1)	19 · 20T, MARK 6G
•	23212-NX6-910	SHAFT, main plan 2	— (1)	15T, MARK 6G	•	23445-NX6-910	GEAR, M-3rd · 4th plan 5	— (1)	19 · 20T, MARK 6G
•	23213-NX6-910	SHAFT, main plan 3	— 1	16T, MARK 6G	•	23446-NX6-910	GEAR, M-3rd · 4th plan 6	— (1)	19 · 24T, MARK 6G
• 2	23221-NX6-000	SHAFT, counter	1 1		•	23447-NX6-910	GEAR, M-3rd · 4th plan 7	— (1)	20 · 20T, MARK 6G
• 3	23225-NX6-000	COLLAR, counter shaft	1 1		•	23448-NX6-910	GEAR, M-3rd · 4th plan 8	— 1	20 · 24T, MARK 6G
• 4	23411-NX6-910	GEAR, C-1st plan 1	— (1)	33T, MARK 6G	• 8	23435-NX6-000	COLLAR, 28mm	1 1	
•	23412-NX6-910	GEAR, C-1st plan 2	— (1)	32T, MARK 6G	• 9	23451-NX6-910	GEAR, C-3rd plan 1	— (1)	29T, MARK 6G
•	23413-NX6-910	GEAR, C-1st plan 3	— (1)	31T, MARK 6G	•	23452-NX6-910	GEAR, C-3rd plan 2	— (1)	28T, MARK 6G
•	23414-NX6-910	GEAR, C-1st plan 4	— 1	32T, MARK 6G	•	23453-NX6-910	GEAR, C-3rd plan 3	— (1)	29T, MARK 6G
•	23415-NX6-910	GEAR, C-1st plan 5	— (1)	31T, MARK 6G	•	23455-NX6-910	GEAR, C-3rd plan 5 / C-4th plan 1	— (1)	28T, MARK 6G
• 5	23421-NX6-910	GEAR, M-2nd plan 1	— (1)	17T, MARK 6G	•	23456-NX6-910	GEAR, C-3rd plan 6 / C-4th plan 2	— 1	27T, MARK 6G
•	23422-NX6-910	GEAR, M-2nd plan 2	— (1)	17T, MARK 6G	• 10	23473-NX6-910	GEAR, C-4th plan 3	— (1)	26T, MARK 6G
•	23424-NX6-910	GEAR, M-2nd plan 4	— (1)	18T, MARK 6G	•	23474-NX6-910	GEAR, C-4th plan 4	— (1)	30T, MARK 6G
•	23425-NX6-910	GEAR, M-2nd plan 5	— 1	18T, MARK 6G	•	23475-NX6-910	GEAR, C-4th plan 5	— 1	29T, MARK 6G
• 6	23431-NX6-910	GEAR, C-2nd plan 1	— (1)	31T, MARK 6G	• 11	23481-NX6-910	GEAR, M-5th plan 1	— (1)	21T, MARK 6G
•	23432-NX6-910	GEAR, C-2nd plan 2	— (1)	30T, MARK 6G	•	23482-NX6-910	GEAR, M-5th plan 2 / M-6th plan 1	— (1)	22T, MARK 6G
•	23433-NX6-910	GEAR, C-2nd plan 3	— (1)	29T, MARK 6G	•	23484-NX6-910	GEAR, M-5th plan 4 / M-6th plan 2	— 1	23T, MARK 6G
•	23434-NX6-910	GEAR, C-2nd plan 4	— (1)	29T, MARK 6G	•	23485-NX6-910	GEAR, M-5th plan 5 / M-6th plan 3	— (1)	23T, MARK 6G
•	23435-NX6-910	GEAR, C-2nd plan 5	— 1	28T, MARK 6G	12	23482-MV9-670	COLLAR, spindle 28×31×9	2 2	
• 7	23441-NX6-910	GEAR, M-3rd · 4th plan 1	— (1)	18 · 20T, MARK 6G	• 13	23491-NX6-910	GEAR, C-5th plan 1	— (1)	26T, MARK 6G
•	23442-NX6-910	GEAR, M-3rd · 4th plan 2	— (1)	18 · 20T, MARK 6G	•	23492-NX6-910	GEAR, C-5th plan 2	— (1)	26T, MARK 6G
•	23443-NX6-910	GEAR, M-3rd · 4th plan 3	— (1)	18 · 24T, MARK 6G	•	23493-NX6-910	GEAR, C-5th plan 3 / C-6th plan 1	— 1	25T, MARK 6G


Block No.

E-8

Transmission

2001 NSR500V

2000 NSR500V

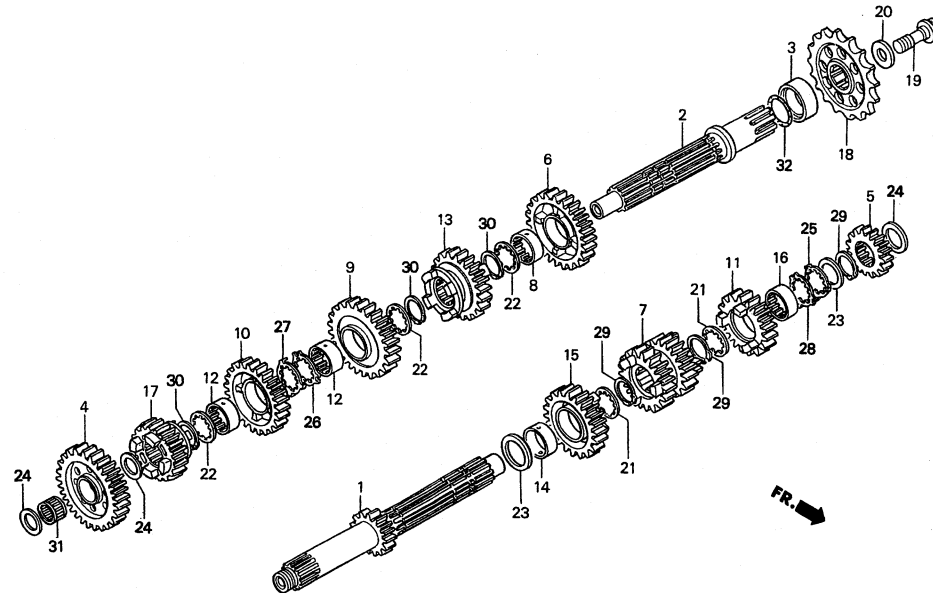


Ref. No.	Part No.	Description	Reqd. No.		Remarks	Ref. No.	Part No.	Description	Reqd. No.		Remarks
			'00	'01					'00	'01	
•	23494-NX6-910	GEAR, C-5th plan 4 / C-6th plan 2	—	(1)	24T, MARK 6G	31	91026-MN0-003	BEARING, needle 20×24×11	1	1	
14	23495-MB0-000	COLLAR, 25×12	1	1		• 32	91301-NX6-003	D-RING, 27.5×30.5×5	1	1	
• 15	23504-NX6-910	GEAR, M-6th plan 4	—	1	24T, MARK 6G						
• 16	23512-NX6-000	COLLAR, spline 25×28×12	1	1							
• 17	23515-NX6-910	GEAR, C-6th plan 5	—	1	23T, MARK 6G						
• 18	23802-NX6-000	SPROCKET, drive 15T	(1)	(1)							
•	23803-NX6-000	SPROCKET, drive 16T	1	1							
•	23804-NX6-000	SPROCKET, drive 17T	(1)	(1)							
• 19	90007-NX6-000	BOLT, flange 10×42	1	1							
• 20	90404-NX6-700	WASHER, 10×36×3.8	1	1							
21	90451-KY2-000	WASHER, spline 25×31×1.5	2	2							
22	90452-MR7-000	WASHER, spline 28×34×1.5	3	3							
23	90456-MA6-000	WASHER, 25mm	2	2							
24	90461-759-000	SHIM, B.3rd gear final red	3	3							
25	90462-MR7-000	WASHER, lock 25mm	1	1							
26	90463-MR7-000	WASHER, spline 28mm	1	1							
27	90464-MR7-000	WASHER, lock 28mm	1	1							
28	90465-MR7-000	WASHER, spline 25mm	1	1							
29	90601-107-000	CIRCLIP, 25mm	3	3							
30	90603-MN4-000	CIRCLIP, 28mm	3	3							

Block No.

E-9

Gearshift fork
Gearshift drum

2001 NSR500V
2000 NSR500V

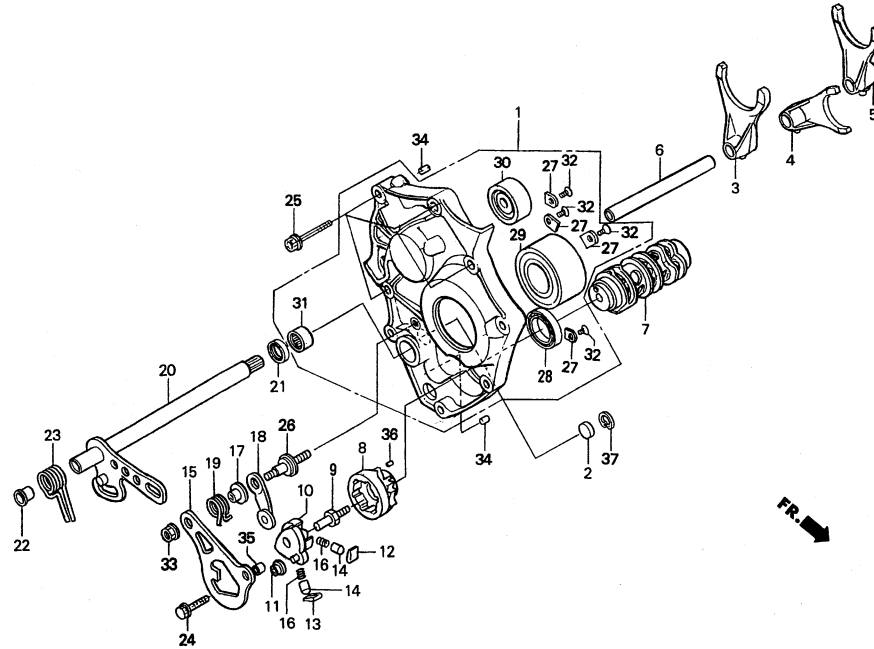

Ref. No.	Part No.	Description	Reqd. No. '00 '01	Remarks	Ref. No.	Part No.	Description	Reqd. No. '00 '01	Remarks
• 1	11130-NX6-000	HOLDER ASSY., transmission bearing	1 —	MARK 6G	• 19	24435-NX6-010	SPRING, drum stopper	1 1	
•	11130-NX6-910	HOLDER ASSY., transmission bearing	— 1		• 20	24610-NX6-010	SPINDLE COMP., gear shift	1 —	
• 2	15115-NX6-000	MAGNET, 16×3.5	1 1		•	24610-NX6-910	SPINDLE COMP., gear shift	— 1	
• 3	24211-NX6-700	FORK R, gear shift	1 1		• 21	24616-NX6-000	COLLAR, shift spindle	1 1	
• 4	24221-NX6-700	FORK C, gear shift	1 —		• 22	24618-NX6-000	CAP, shift spindle	1 1	
•	24221-NX6-910	FORK C, gear shift	— 1		• 23	24651-NX6-000	SPRING, shift return	1 1	
• 5	24231-NX6-700	FORK L, gear shift	1 1		24	90004-GHB-660	BOLT, flange NSHF 6×22	1 1	
• 6	24265-NX6-700	SHAFT, shift fork	1 1		• 25	90005-NX6-000	BOLT, flange 7×30	8 8	
• 7	24310-NX6-000	DRUM COMP., gear shift	1 1		• 26	90013-NX6-700	BOLT, drum stopper	1 1	
• 8	24312-NX6-000	CENTER, shift drum	1 1		• 27	90471-NX6-000	STOPPER, bearing 10	4 4	
9	24315-HA0-000	PIN, shifter	1 1		• 28	91007-NX6-003	BEARING, ball 6805LU	1 1	
• 10	24321-NX6-700	SHIFTER, drum	1 1		• 29	91011-NX6-003	BEARING, ball 5205Z	1 1	
• 11	24322-NX6-700	COLLAR, drum shifter	1 1		• 30	91022-NX6-003	BEARING, needle 20mm	1 1	
• 12	24324-NX6-000	PAWL, A.ratchet 12	1 1		• 31	91023-NX6-003	BEARING, needle 15×21×10	1 1	
• 13	24325-NX6-000	PAWL, B.ratchet 12.75	1 1		32	93600-06012-0A	SCREW, flat 6×12	4 4	
14	24326-KBH-901	PLUNGER, pawl	2 2		33	94050-06000	NUT, flange 6mm	1 1	
• 15	24328-NX6-000	PLATE, guide	1 1		34	94301-06100	DOWEL PIN, 6×10	2 2	
16	24329-KA3-740	SPRING, pawl plunger	2 2		35	94301-08100	DOWEL PIN, 8×10	1 1	
• 17	24329-NX6-700	COLLAR, stopper spring	1 1		36	94303-04065	DOWEL PIN, 4×6.5	1 1	
• 18	24430-NX6-700	STOPPER COMP., drum	1 1		• 37	94520-16000	CIRCLIP, internal 16	1 1	

2001-NSR500V PART NO. INDEX

Part No.	Block	Part No.	Block	Part No.	Block	Part No.	Block
11000-NX6-307	E-6	22100-NX6-305	E-2	23424-NX6-910	E-8	23494-NX6-910	E-8
11000-NX6-308	E-6	22103-HA0-300	E-2	23425-NX6-910	E-8	23495-MB0-000	E-8
11106-GM2-300	E-6	22106-NX6-000	E-2	23431-NX6-910	E-8	23504-NX6-910	E-8
11130-NX6-000	E-9	22108-NX6-700	E-2	23432-NX6-910	E-8	23512-NX6-000	E-8
11130-NX6-910	E-9	22111-NX6-000	E-2	23433-NX6-910	E-8	23515-NX6-910	E-8
11331-NX6-000	E-2	22112-NX6-000	E-2	23434-NX6-910	E-8	23802-NX6-000	E-8
11331-NX6-910	E-2	22113-NX6-000	E-2	23435-NX6-000	E-8	23803-NX6-000	E-8
11395-NX6-000	E-2	22120-NX6-000	E-2	23435-NX6-910	E-8	23804-NX6-000	E-8
11395-NX6-910	E-2	22201-NX6-000	E-2	23441-NX6-910	E-8		
		22210-NX6-000	E-2	23442-NX6-910	E-8		
		22321-NX6-000	E-2	23443-NX6-910	E-8		
		22351-NX6-000	E-2	23444-NX6-910	E-8	24211-NX6-700	E-9
14100-NX6-801	E-6	22401-NX6-000	E-2	23445-NX6-910	E-8	24221-NX6-700	E-9
14112-NX6-600	E-6	22810-NX6-000	E-6	23446-NX6-910	E-8	24221-NX6-910	E-9
14113-NX6-800	E-6	22815-NX6-000	E-6	23447-NX6-910	E-8	24231-NX6-700	E-9
14121-NX6-000	E-6	22841-NX6-000	E-2	23448-NX6-910	E-8	24265-NX6-700	E-9
14131-NX6-000	E-6	22850-NX6-000	E-2	23451-NX6-910	E-8	24310-NX6-000	E-9
				23452-NX6-910	E-8	24312-NX6-000	E-9
				23453-NX6-910	E-8	24315-HA0-000	E-9
				23455-NX6-910	E-8	24321-NX6-700	E-9
15115-NX6-000	E-9	23211-NX6-910	E-8	23456-NX6-910	E-8	24322-NX6-700	E-9
15611-NF4-900	E-2	23212-NX6-910	E-8	23473-NX6-910	E-8	24324-NX6-000	E-9
		23213-NX6-910	E-8	23474-NX6-910	E-8	24325-NX6-000	E-9
		23221-NX6-000	E-8	23475-NX6-910	E-8	24326-KBH-901	E-9
		23225-NX6-000	E-8	23481-NX6-910	E-8	24328-NX6-000	E-9
16210-NX6-000	E-6	23411-NX6-910	E-8	23482-MV9-670	E-8	24329-KA3-740	E-9
16219-NX6-000	E-6	23412-NX6-910	E-8	23482-NX6-910	E-8	24329-NX6-700	E-9
16220-NX6-000	E-6	23413-NX6-910	E-8	23484-NX6-910	E-8	24430-NX6-700	E-9
		23414-NX6-910	E-8	23485-NX6-910	E-8	24435-NX6-010	E-9
		23415-NX6-910	E-8	23491-NX6-910	E-8	24610-NX6-010	E-9
		23421-NX6-910	E-8	23492-NX6-910	E-8	24610-NX6-910	E-9
22100-NX6-000	E-2	23422-NX6-910	E-8	23493-NX6-910	E-8	24615-NX6-000	E-6

2001-NSR500V PART NO. INDEX

Part No.	Block	Part No.	Block	Part No.	Block	Part No.	Block
24616-NX6-000	E-9	90413-NX6-000	E-2	91012-NX6-003	E-6		
24618-NX6-000	E-9	90414-NX6-000	E-2	91021-148-006	E-6	94050-06000	E-6
24651-NX6-000	E-9	90415-NX6-000	E-2	91021-415-005	E-2		E-9
		90432-MB0-010	E-2	91022-NX6-003	E-9	94301-06100	E-9
		90443-MB0-000	E-6	91023-NX6-003	E-6	94301-08100	E-2
		90445-MM4-000	E-6		E-9		E-9
35750-NX6-700	E-6	90451-KG4-000	E-2	91024-NX6-003	E-6	94301-12160	E-6
		90451-KY2-000	E-8	91026-MN0-003	E-8	94303-04065	E-9
		90452-MR7-000	E-8	91201-VA4-801	E-6	94303-08140	E-6
		90456-MA6-000	E-8	91204-GK8-003	E-6	94520-16000	E-9
90001-NX6-000	E-6	90461-759-000	E-8	91204-NX6-000	E-6		
90002-NX6-000	E-6	90462-MR7-000	E-8	91210-723-751	E-6		
90004-GHB-630	E-6	90463-MR7-000	E-8	91222-NX6-003	E-2		
90004-GHB-650	E-2	90464-MR7-000	E-8	91253-KM1-003	E-2	95002-02070	E-6
	E-6	90465-MR7-000	E-8	91301-NX6-003	E-8	95003-10030-31	E-6
90004-GHB-660	E-9	90471-NX6-000	E-6	91303-NX6-000	E-6	95701-08055-00	E-6
90004-GHB-680	E-2		E-9	91304-MJ0-003	E-2		
90005-NX6-000	E-9	90497-NX6-000	E-2	91305-KK4-003	E-6		
90007-NX6-000	E-8	90543-273-000	E-6	91312-NC8-000	E-2		
90008-NX6-000	E-6	90558-MJ0-000	E-6	91361-NX6-700	E-2	96001-06012-00	E-6
90009-NX6-000	E-6	90601-107-000	E-8			96211-07000	E-2
90013-NX6-700	E-9	90603-MN4-000	E-8				
90014-KV3-680	E-6	90652-GHB-690	E-6				
90021-NX6-000	E-6			92900-06028-0E	E-6		
90022-MM5-000	E-2			92900-06035-0E	E-6		
90080-NX6-000	E-6						
90082-NX5-000	E-6	91001-GBT-003	E-6				
90134-NX5-000	E-6	91002-HA2-008	E-6				
90208-NX6-000	E-2	91004-NX6-801	E-6	93600-06012-0A	E-6		
90404-NX6-700	E-8	91007-NX6-003	E-9		E-9		
90411-NX6-000	E-2	91008-NX6-003	E-6				
90412-NX6-000	E-2	91011-NX6-003	E-9				



Honda Racing Corporation

Head Office/3-15-1 Senzui, Asaka-shi, Saitama-pref., 351-0024 Japan

TEL. 048-461-9511 TELFAX. 048-469-0068

European Office/Wijngaardveld 1, B 9300. Aalst. Belgium.

TEL. 053-78-6131 TELFAX. 053-77-5767